Perforated Curved Front Door for NetShelter™ SX Cabinets AR70XX Models

Inventory

Perforated Front Door (1)



Assembly Hinge (2)



M6 X 12 Flat Screw (4)



M6 X 12 Pan Screw (1)

Washer (1)

Tool required (provided)

Installation

NOTE: The door can be installed on either the left or right side.

NOTE: Smaller cabinets may look different than the illustration.

Install the door

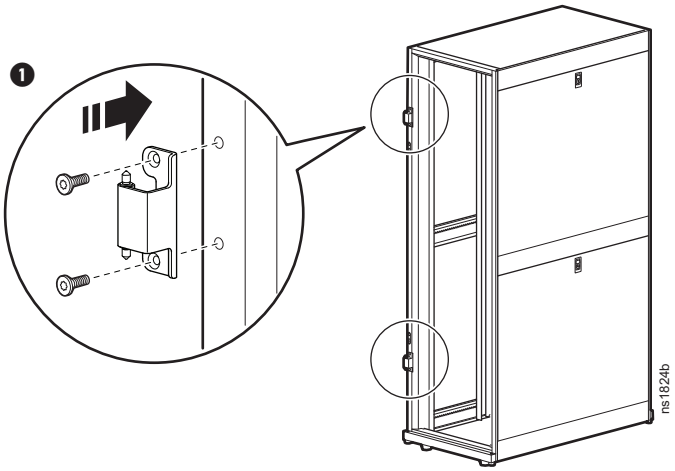

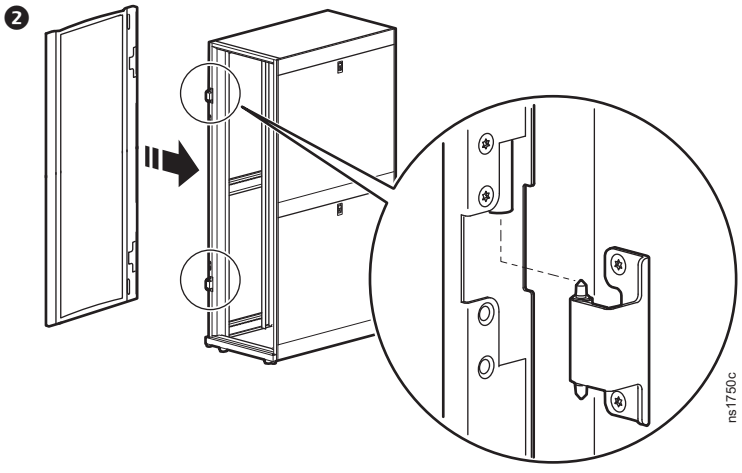

❸

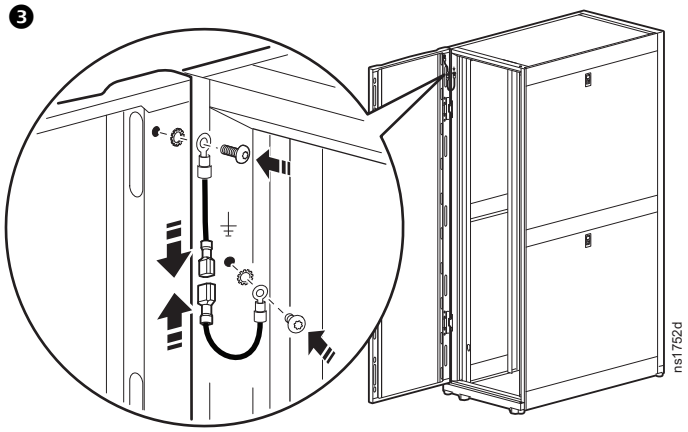

❹

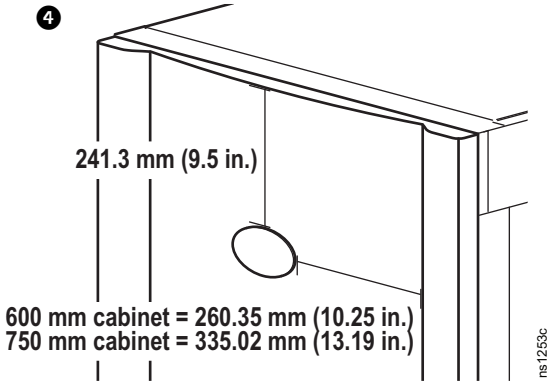

Reverse the door

❶

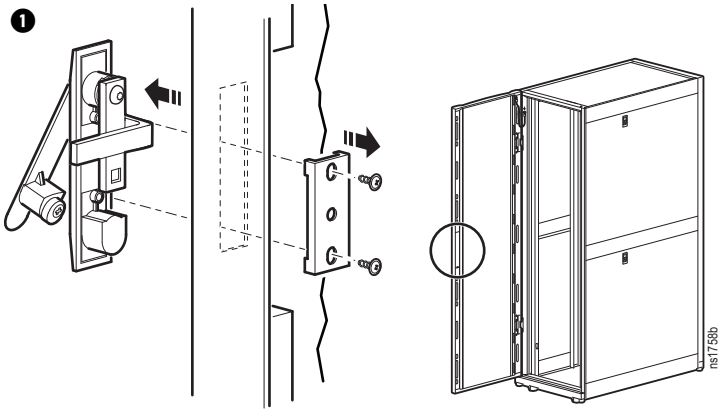

❷ ❸

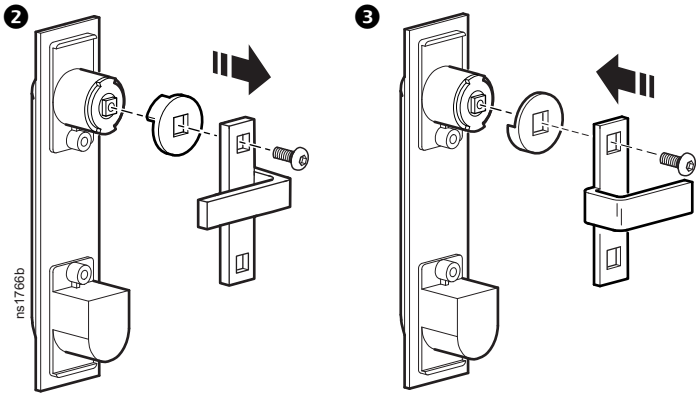

❹

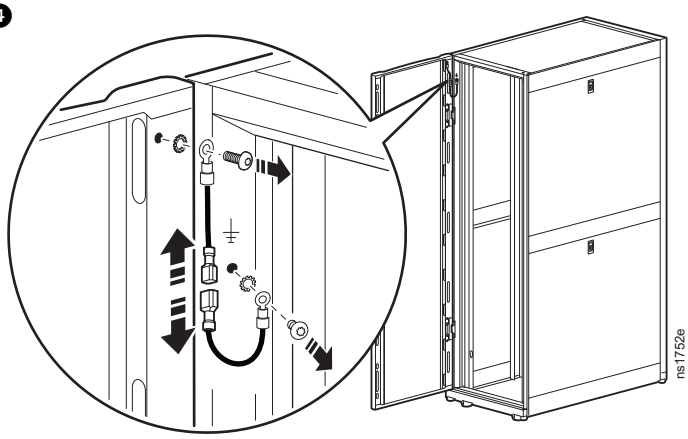

❺

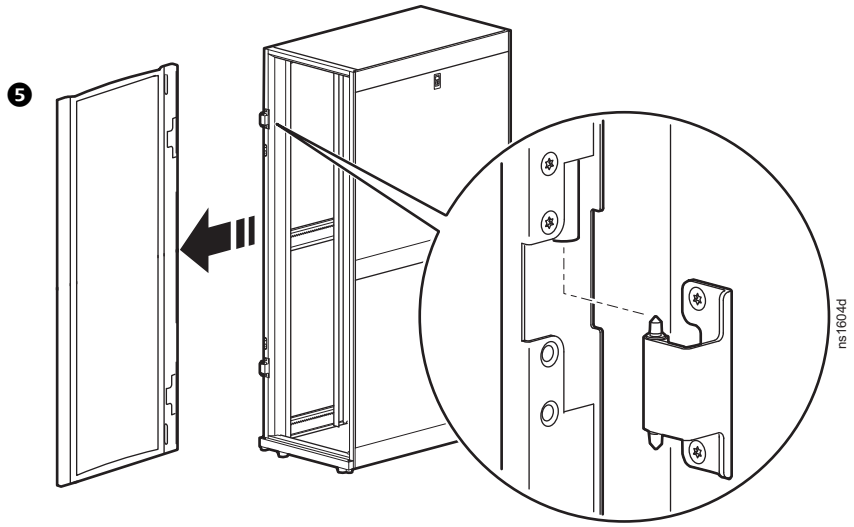

❻

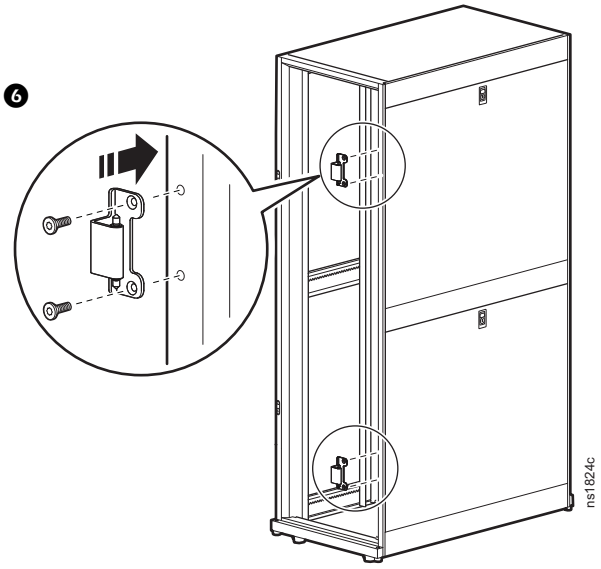

❼

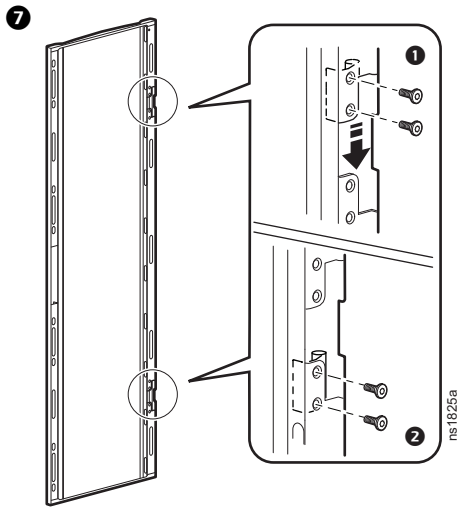

❽

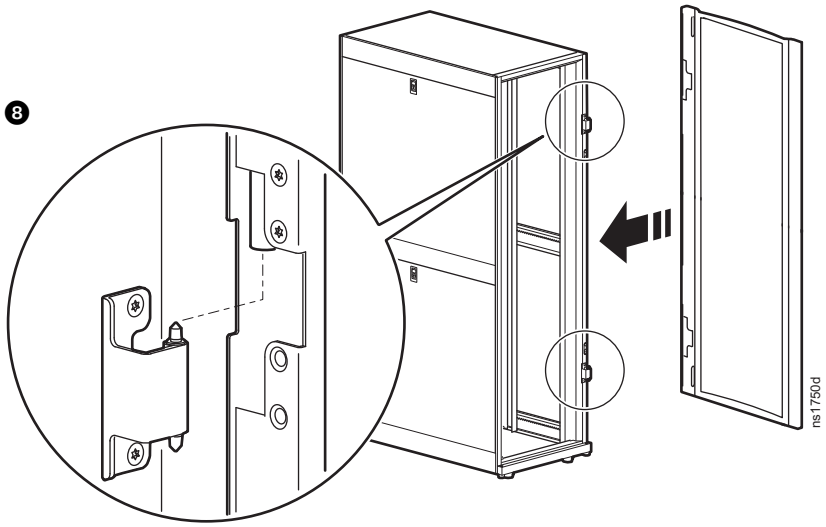

❾

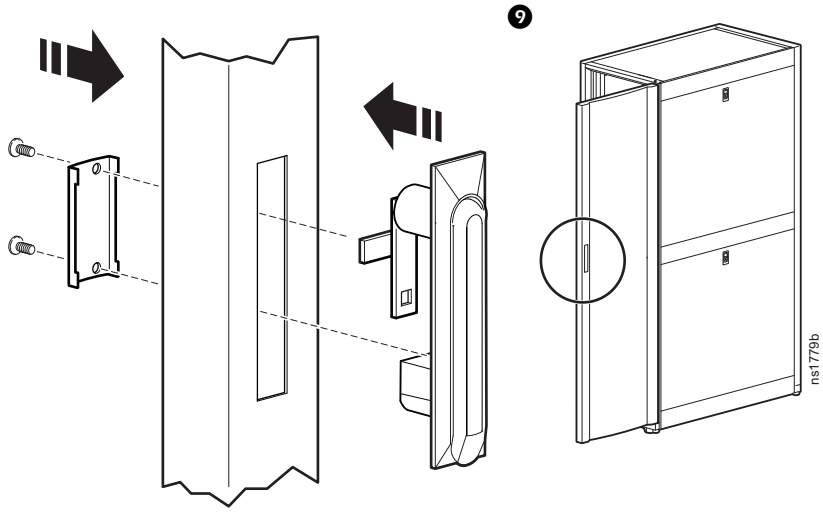

❿

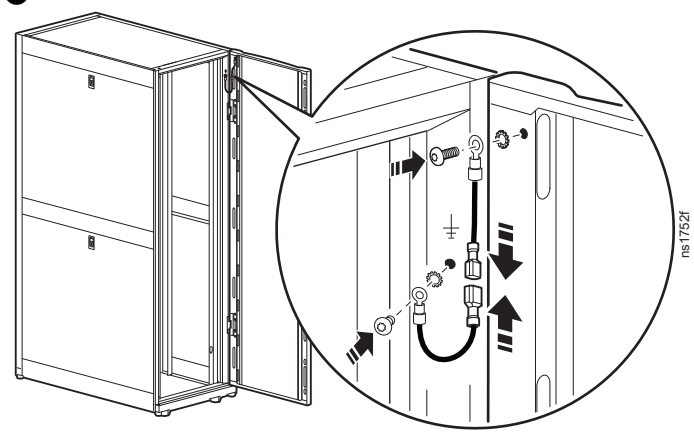

⓫

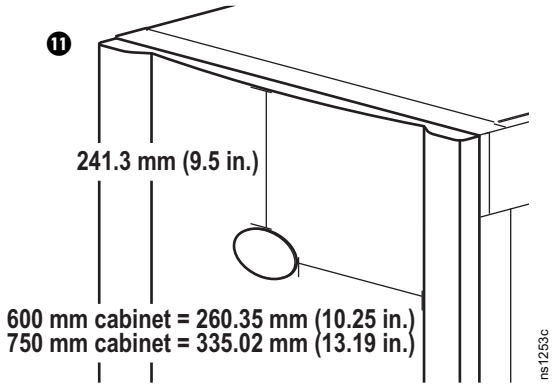

Customer support and warranty information is available at **www.apc.com**.

© 2019 APC by Schneider Electric. All Rights Reserved.

990-2219D-001
1/2019